


# 14.179 PRETS179 — Pre-tension

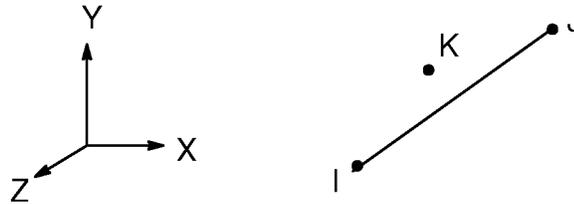

Matrix or Vector	Shape Functions	Integration Points
Stiffness Matrix	None	None

Load Type	Distribution
Pre-tension Force	Applied on pre-tension node K across entire pre-tension section

## 14.179.1 Introduction

The element is used to represent a two or three dimensional section for a bolted structure. The pre-tension section can carry a pre-tension load. The pre-tension node (K) on each section is used to control and monitor the total tension load.

## 14.179.2 Assumptions and Restrictions

The pre-tension element is not capable of carrying bending or torsion loads.